




1 Break out wedge strip from Top bar & retain. Slot side bars onto top bar as shown, with groove to inside. Nail in place as indicated with 2 x 19mm

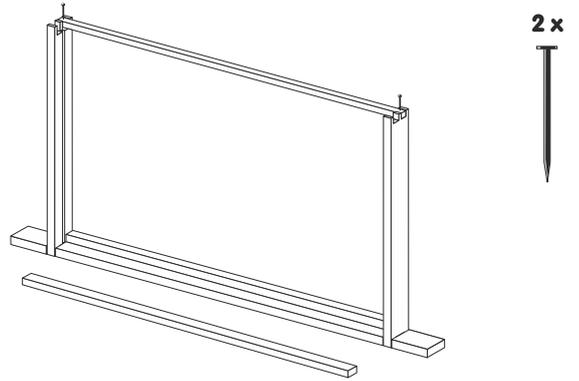


2 Place first bottom rail in position as shown and nail in place as indicated with 2 x 19mm black Gimp pins.

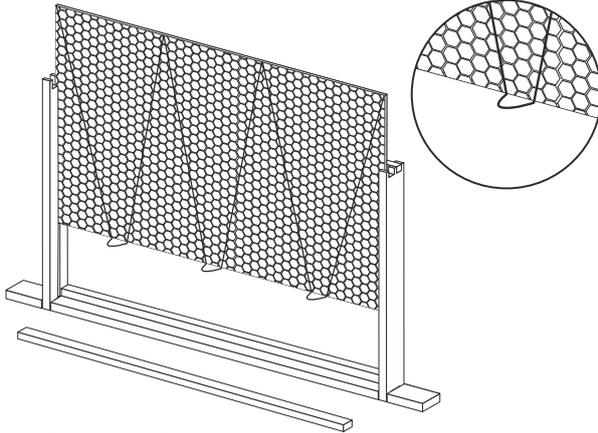


3 Bend over wire loops at right angles
Carefully slide wax insert into side grooves until wire loops rest on Top

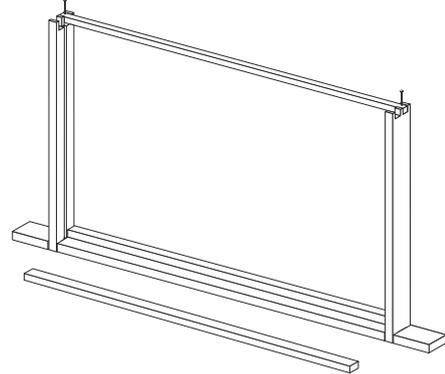


4 Press wedge strip (from step 1) between side rails, down onto wire loops as shown and nail into rear of top rail with 3 x 19mm black Gimp pins as shown. Fit second bottom rail and nail in place as indicated with 2 x 19mm

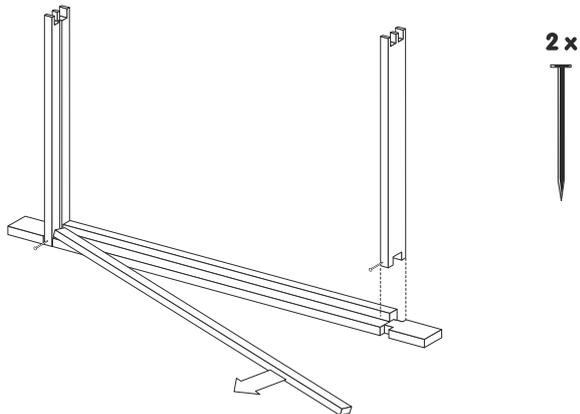


1 Break out wedge strip from Top bar & retain. Slot side bars onto top bar as shown, with groove to inside. Nail in place as indicated with 2 x 19mm

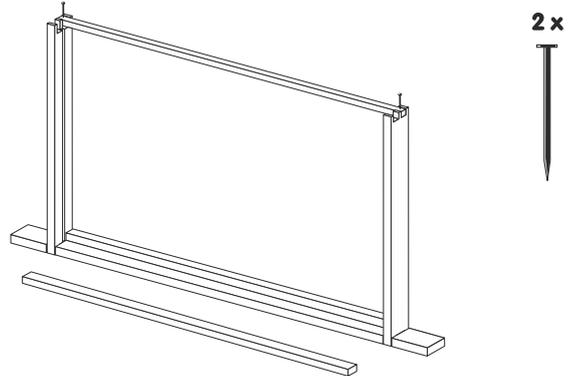

2 Place first bottom rail in position as shown and nail in place as indicated with 2 x 19mm black Gimp pins.

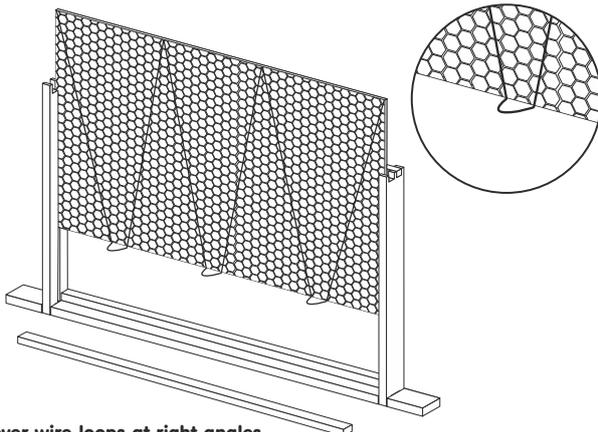

3 Bend over wire loops at right angles
Carefully slide wax insert into side grooves until wire loops rest on Top bar.

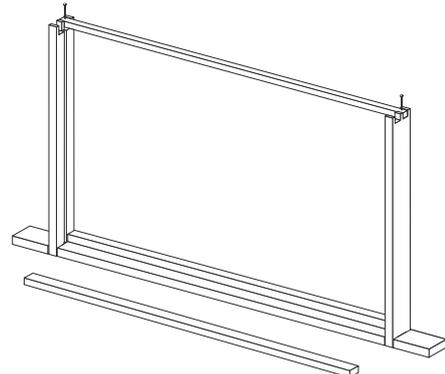

4 Press wedge strip (from step 1) between side rails, down onto wire loops as shown and nail into rear of top rail with 3 x 19mm black Gimp pins as shown. Fit second bottom rail and nail in place as indicated with 2 x 19mm